

WRIGHT BAMBOO

Extra Long-plank, Wide-width PureForm™ Solid Bamboo Flooring



FINE BAMBOO FLOORING, PANELS & WORKTOPS

Featuring our classic PureForm™ bamboo in extra-long planks, Wright Bamboo is the perfect meeting of traditional and contemporary. The vertical grain construction beautifully compliments the three modern colors featured in this collection, and the light wirebrushed texture adds warmth and depth. A tongue and groove profile enables flexibility in installation, and the wider, longer planks draw the eye to the horizon, creating a greater sense of space.



FEATURES + BENEFITS

PERFORMANCE

- TrueMark® Glaze Tek- 4 coats of hand applied base & accent color, with 12 coats of finish
- Premium PureForm™ bamboo – Averages 40% harder than red oak
- Optimum 5.5 Moso Bamboo: Harvested at maturity for peak density, creating a harder and more stable product for lasting beauty and performance

VALUE

- Lifetime structural warranty; 10-year heavy-use commercial/25-year residential finish warranties

ECOSMART

- Certified USDA BioPreferred – 99% biobased content
- FSC®- Certified material available upon request*

INDOOR AIR QUALITY


- Floorscore certified for superior indoor air quality.
- Qualifies for Collaborative for High Performance Schools 2009 Criteria EQ2.2.3 – Low Emitting Materials



WRIGHT BAMBOO Hughes

PRODUCT DETAILS

Nominal Dimensions :	75.59" x 7.48" x .59" (1920mm x 190mm x 15mm)
Construction:	Solid PureForm™ Traditional Bamboo
Milling:	4 Side Micro bevel
Profile:	Tongue and Groove
Accessories:	Full line of coordinating 15mm accessories
Color Variation:	Moderate

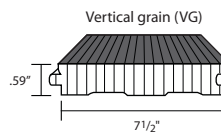

LEED® CREDITS

- IEQ 4.3 Low Emitting Materials
- Certified Wood: MR7 – *available upon request

INSTALLATION + CARE

Installation Environment:	Nail, Glue and Float installation into environments having 35-55% RH.
Nail & Staple Installation:	On or Above grade. Use vapor retarder over wood subfloor.
Glue Installation:	On or Above grade. Use a vapor barrier over cement subfloor OR vapor retarder over wood subfloor.
Float Installation:	On, Above or Below grade. Use a vapor barrier with pad over cement subfloor OR vapor retarder with pad over wood subfloor.
Recommended Adhesive:	Premium Bamboo Flooring Adhesive
Nailing Guidelines:	18 or 20 gauge cleat x 1.5"
Acclimation:	Minimum of 48 hours on-site in box
Maintenance:	TrueClean Floor Cleaner



Hughes



Crossfield



Lindbergh